



Use this instruction only when changing from A to C type iM.60 board!

The most important differences between A and C type iM.60 board are shown in the following pictures.

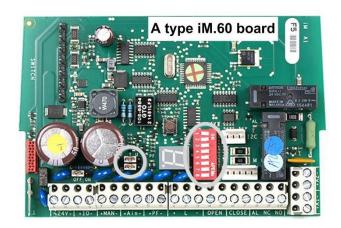

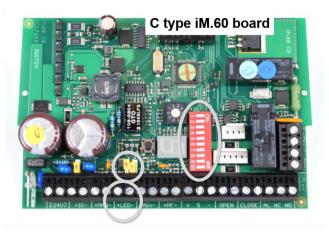

Connectors:

 
The C type board has an additional alarm led output. It's necessary to reconnect the wires.

Dipswitches:


The C type board has 10 dips instead of 8. Functionality of dip 1 through 8 is still the same. Set dip 9 to ON and 10 to OFF!

Jumpers - sliding switches:

Temperature measurement setting:



Traditional terminal setting:

 

Adjusting:

Adjust the C type board according to the iM.60 brushless manual (35911713).